



**USER MANUAL –
INSTALLATION AND OPERATION**



PV Inverter

**HNS3000TL/ HNS3600TL/ HNS4000TL/ HNS4500TL
/ HNS5000TL/ HNS5500TL/ HNS6000TL**

About Afore

Afore New Energy Technology (Shanghai) Co., Ltd., located in the Hi-Tech PV center of Shanghai, China, is an international PV enterprise, which is specialized in manufacturing of solar PV inverters.

Afore is dedicated to providing perfect power conversion and control solutions for solar power generation installations R&D, manufacturing and marketing of solar PV inverters. Afore possesses the first-class production equipment and international R&D team. The core business is to provide all kinds of high-quality and reliable grid-connected solar Inverters and energy system solutions to satisfy the consistently increasing demands for global energy.

The newly designed PV Inverter features itself with full load high efficiency, high reliability and user-friendly interface. The conversion efficiency of our inverter is up to 97%. A user-friendly installation & interface, professional industrial design, and design for reliability mechanism, give the Inverter Family a competitive edge for customers from all regions.

As a customer-oriented company, Afore is always trying to improve itself and enhance customer satisfaction. High quality is the fountain of life for Afore, not just in product quality control, but in quality of service and support. AFORE is able to help customers reduce energy consumption and carbon dioxide emissions by leading green solutions.



Contents

1 About This Manual	1
1.1 Scope of Validity.....	1
1.2 Target Group.....	1
1.3 Additional Information.....	1
2 Safety Instructions	1
2.1 Safety Precautions.....	1
2.2 Explanations of Symbols.....	2
3 Unpacking	3
3.1 Assembly Parts	3
3.2 Identifying the Inverter	3
4 Mounting	4
4.1 Selecting the Appropriate Mounting Location.....	4
4.2 Mounting the Inverter with Wall Mounting Bracket.....	5
5 Electrical Connection	6
5.1 Overview of the Connection Area	6
5.2 Connection to the RS485 and Public Grid (AC)	7
5.2.1 Conditions for Connection	7
5.2.2 Connection to the RS485 and Public Grid (AC)	7
5.3 Connection to the PV Generator (DC).....	10
5.3.1 Conditions for the DC Connection	11
5.3.2 Assembling the DC Plug Connector	11
5.3.3 Connecting the PV Generator (DC).....	13
6 System Diagram.....	13
7 Operation	15
Product Overview	15
7.1 Overview of Controls and Displays.....	15
7.2 Commissioning	16
7.3 LED Display	16
7.4 LCD Display.....	17
7.4.1 LCD Display	17
7.4.2 Main Menu	19
8 Auto Test	21
9 Trouble Shooting.....	26
10 Technical Data.....	31
11 Contact.....	33
Annex.....	34

1 About This Manual

1.1 Scope of Validity

This manual describes the assembly, installation, commissioning, operation and maintenance of the following ANYHOME series grid-connected PV inverters produced by Afore New Energy:

- HNS3000TL
- HNS4000TL
- HNS5000TL
- HNS6000TL
- HNS3600TL
- HNS4500TL
- HNS5500TL

Please keep this manual all time available in case of emergency.

1.2 Target Group

This manual is for qualified personnel. The tasks described in this manual must only be performed by qualified personnel.

1.3 Additional Information

Further information on special topics, such as description of parameters and measurement readings, can be downloaded in the download area at www.aforeenergy.com.

2 Safety Instructions

2.1 Safety Precautions

1. All work on the inverter must be carried out by skilled electricians. And ensure that children do not play with the equipment.
2. The device may only be operated with PV generators. Do not connect any other source of energy to the device.
3. The PV generator and inverter must be connected to the ground in order to reach maximum protection for property and persons.
4. Do not remove cover until **3** minutes after disconnecting all sources of supply. This










is because the charge stored in capacitors may provide a risk of electric shock or a risk of electrical energy-high current level.

5. The enclosure of Inverter can become hot during operation. To reduce the risk of injury, do not touch the cover, heat sink at the back of the PV-Inverter or nearby surfaces while Inverter is operating.

6. Do not use the equipment for purposes other than those described in this manual.

7. Both the inverter and associated transport packaging are mainly made of recyclable raw materials. Please ensure that the used device and any relevant accessories are disposed of in accordance with applicable regulations.


2.2 Explanations of Symbols

Symbol	Explanation
	Danger of Electric Shock. The inverter is directly connected with the public grid. All work on the inverter must be carried out by qualified personnel only.
	Beware of hot surface. The inverter can become hot during operation. Do not contact the device during operation.
	Caution, risk of electric shock Energy storage timed discharge, time to be indicated adjacent to the symbol.
	Caution, Danger. This device directly connected with electricity generators and public grid.
	Do not dispose of this device with the normal domestic waste.
	Without Transformer. This inverter does not use transformer for the isolation function.
	CE mark. The inverter complies with the requirements of the applicable EC guidelines.
	Regulatory compliance mark. The inverter complies with the requirements of Australian Communications Authority guidelines, safety and EMC guidelines.
	Notes, Important. Non-adherence to these instructions may adversely affect the operating convenience or functionality of the device.

3 Unpacking

3.1 Assembly Parts

Please check the delivery for completeness and any visible external damage. Contact your dealer at once if anything is damaged or missing.

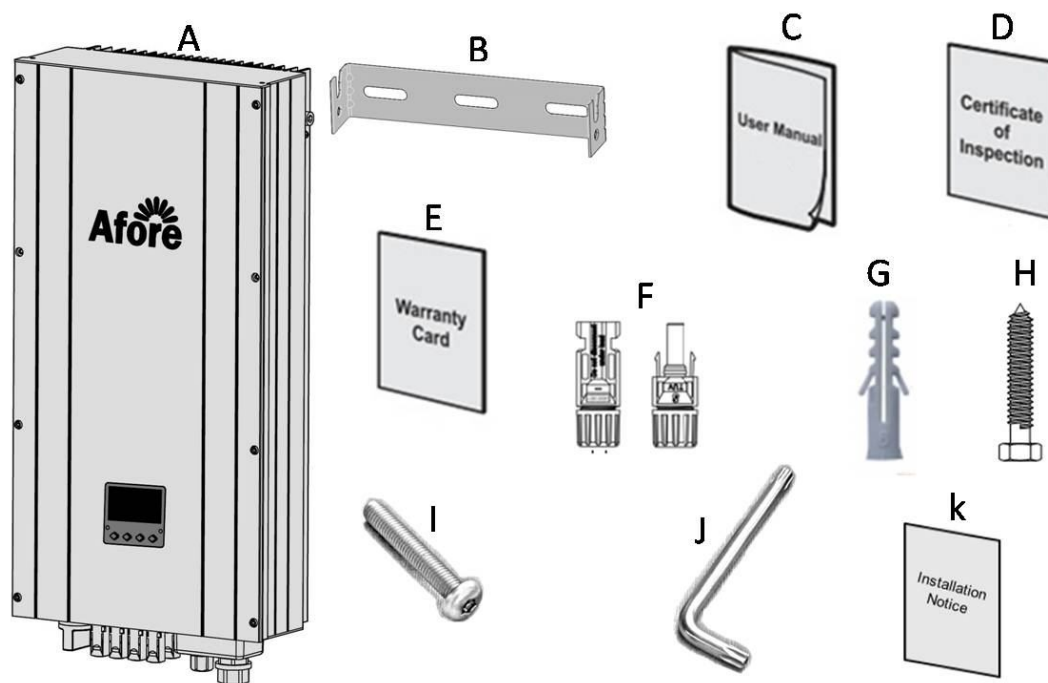

Object Quantity Description

Object	Quantity	Description	Object	Quantity	Description
A	1	Solar inverter	F	4 sets	DC plug connector
B	1	Wall mounting bracket	G	3	Plastic Expansion Tube
C	1	User manual	H	3	Tapping screw
D	1	Certificate of Inspection	I	2	Security screw
E	1	Warranty Card is included in 'User Manual'	J	1	Screwdriver for security screw
			K	1	Installation Notice

3.2 Identifying the Inverter

You can identify the inverter using the type label. Information such as serial number (Serial No.) and type of the inverter, as well as device-specific characteristics are specified on the type label. The type label is on the right side of the enclosure.

4 Mounting



DANGER!

Danger to life due to potential fire or electric shock.

Do not install the inverter near any inflammable or explosive items. The inverter will be directly connected with high voltage power generation device. The installation must be performed by qualified personnel only in compliance with national and local standards and regulations.



CAUTION!

Danger of burn injuries due to hot enclosure parts.

- Install the inverter so that it cannot be touched inadvertently.


Risk of injury due to the heavy weight of the inverter.

- Take the inverter's weight of approx. 16 kg into account for mounting.

4.1 Selecting the Appropriate Mounting Location

Consider the following points when selecting where to install:


- The mounting method and location must be suitable for the inverter's weight and dimensions.
- Mount on a solid surface. But do not mount the unit on plasterboard walls or similar in order to avoid audible vibrations for the inverter can make noises when in use.

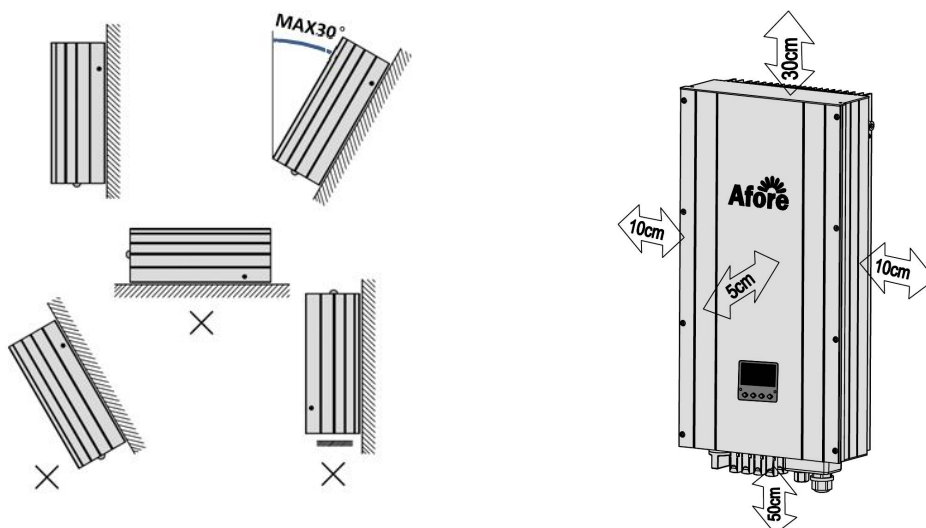


- Vertical installation or tilted backward by max. 30 degree is allowed.
- Never mount the device with a forward tilt, horizontally or even upside down
- For the convenience of checking the LCD display and possible maintenance activities, please install the inverter at eye level.
- The ambient temperature of installation site should be between -20 °C and +55 °C (between -4 °F and 131 °F).
- Install the inverter directly exposes to strong sunshine is not recommended, the excess heating might lead to power reduction.
- Provide better ventilation for the inverter to ensure that the heat is dissipated adequately.
- The site altitude of installation should be below 1000m above sea level; more than 1000m above the sea level will cause derating.

4.2 Mounting the Inverter with Wall Mounting Bracket

1. Use the wall mounting bracket as a drilling template and drill the holes for the screws.

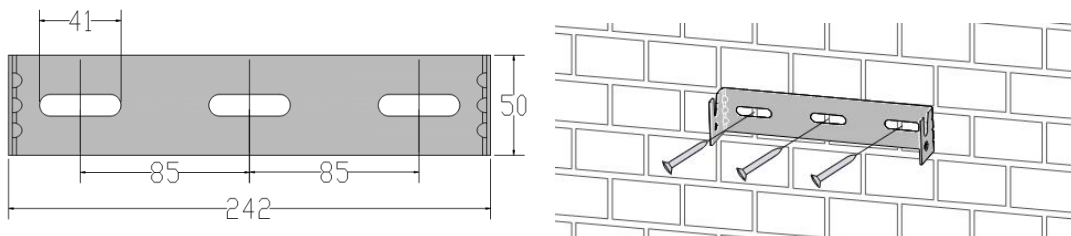

2. Fix the wall mounting bracket to the wall using appropriate screws (diameter min. 6 mm, max. 8 mm) and washers (outer diameter min. 12 mm, max. 24 mm).
3. Hang the inverter to the mounting bracket and ensure the slot is fitted on the bracket.
4. Check to ensure the inverter is correctly seated. Make sure to lock it with the security screws on both sides to ensure the inverters, see the figure below.)

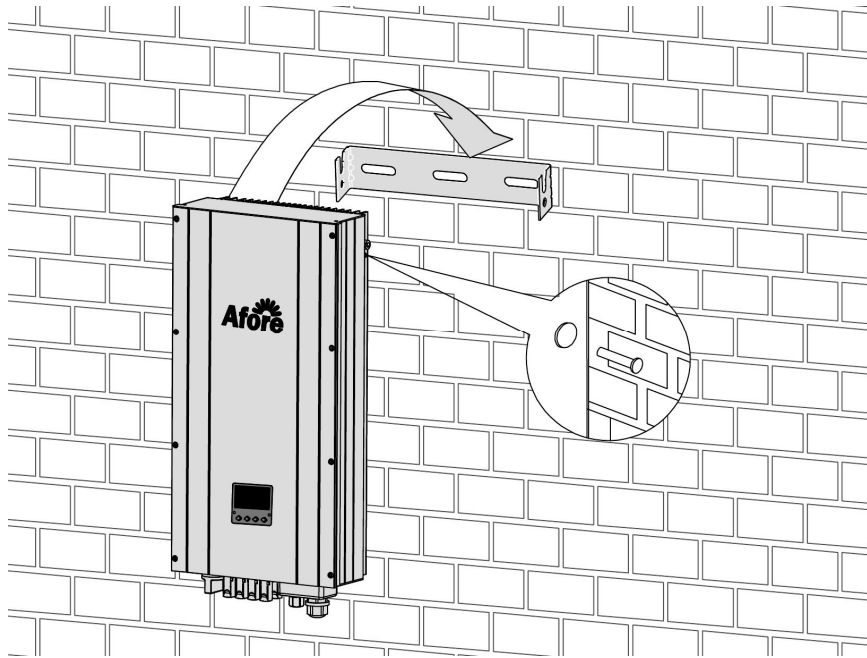

5 Electrical Connection



Notes:

1. After the inverter has been installed in its fixed position, the electrical connection to the unit can be established.
2. Make sure Max. Open Voltage and short-circuit current of the each PV strings accord with the Spec.
3. Choose the appropriate cable width for AC/DC wire.
4. To connect the inverter, the AC and DC sides must be disconnected from all power sources and secured against being inadvertently switched back on.
5. Before connecting the inverter to PV arrays and public grid, make sure the polarity is correct.




Notes:

Electrical installation & maintenance shall be conducted by licensed electrician and shall comply with Australia National Wiring Rules.

5.1 Overview of the Connection Area

The following figures show the assignment of the individual connection areas on the bottom of the inverter.

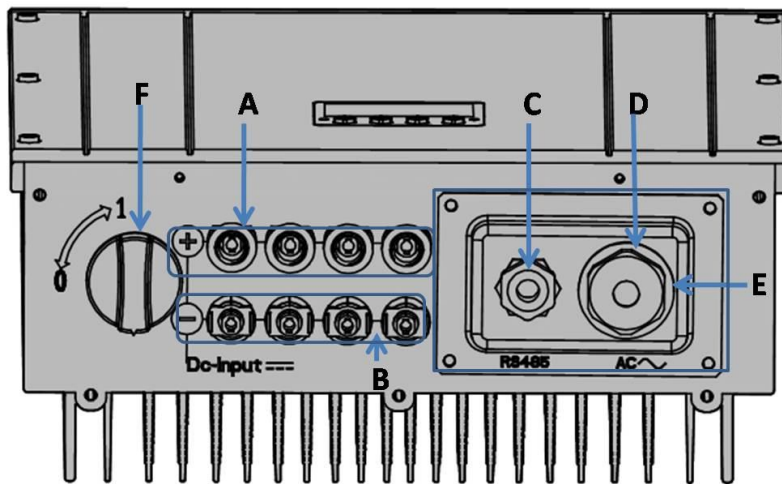

Object	Description
A	DC connectors (+) for connecting the PV strings
B	DC connectors (-) for connecting the PV strings
C	Waterproof connector for the communication connection (RS485 Quick Module)
D	Waterproof connector for the AC connection
E	waterproof cover for RS485 connection and AC connection
F	Switch(optional)

5.2 Connection to the RS485 and Public Grid (AC)

5.2.1 Conditions for Connection



CAUTION!


Load Disconnection Unit

An individual circuit breaker should be equipped for each inverter in order that the inverter can be safely disconnected under load.

5.2.2 Connection to the RS485 and Public Grid (AC)

Measure the grid voltage, make sure it within the permissible range. Disconnect the circuit breaker between the invert and the grid.

Assembling the cables, please refer to the following figure.

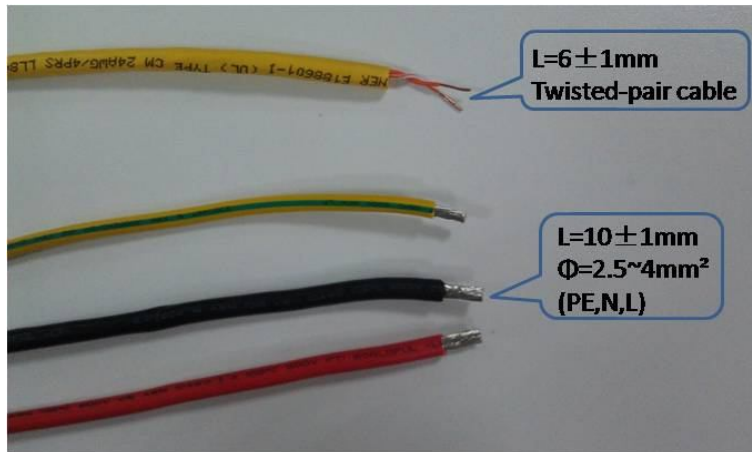


Loosen the screws and waterproof connectors, and open the waterproof cover.



Two holes will turn up after loosen the waterproof connectors (C&D). Then thread the 3 electric wires through the bigger one (D), and thread the communication line through the other one(C). Please refer to the following figure.




The following figure shows the assignment of the individual connection sockets. Loosen the screws to end in counter-clockwise, insert the cables into the socket, then tighten the screws to end in clockwise. Make sure the wires are securely connected. As shown in the following figures.

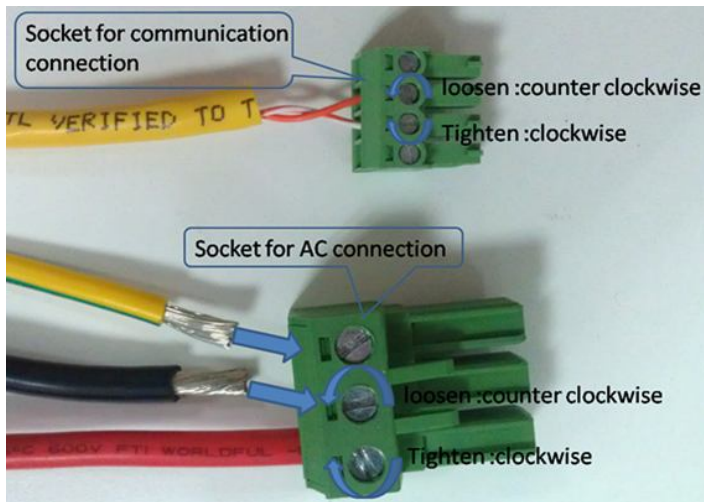

Connection to the Public Grid:


According to polarities, connect the grounding line to PE terminal; the neutral line to N; and phase line to L. as shown in the following figure.

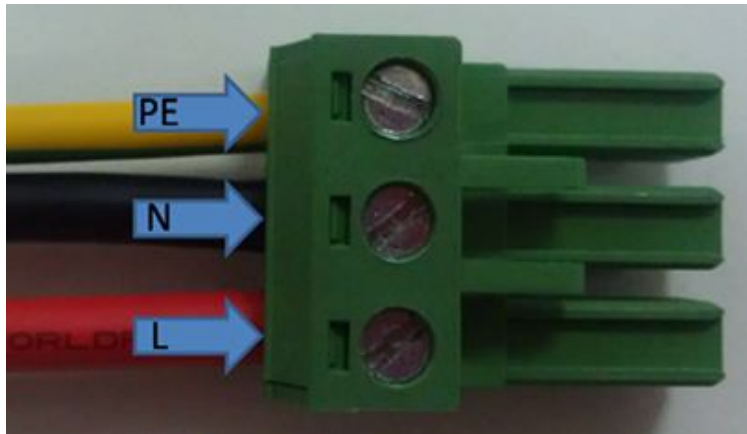

Communication via RS485 (optional) :

Only twisted-pair cable (or AB cable) apply to the communication connection.

There are 4 pins for communication connection, as shown in the figure, and they are defined as follows:

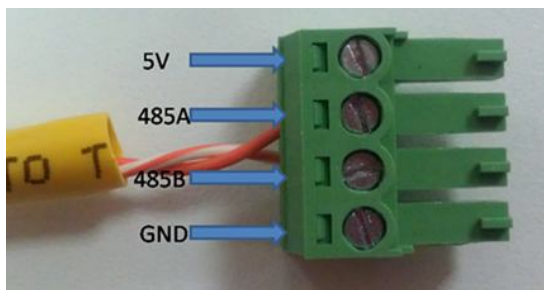

Pin1	Pin2	Pin3	Pin4
5V	485A	485B	GND

Pin 1 and pin4 is only used when communication is realized through wireless communication module.

Connect Pin 2, Pin 3 if communication is realized through RS485.

RS485 can be used for multipoint communication. Up to 31 inverters can communicate and be monitored through one communication module.

RS485 communication module and receiver can be purchased from Afore New Energy as options. And relevant monitoring software can be downloaded from www.aforeenergy.com.

Insert the sockets into the terminal blocks, as shown in the following figure.



Close the waterproof cover, tighten the waterproof connector (C&D) and the screws.



5.3 Connection to the PV Generator (DC)



CAUTION!

Load Disconnection Unit

On the DC side out of inverter there is a circuit breaker (optional), in order that the inverter can be safely installed, the circuit breaker must be switched off.

5.3.1 Conditions for the DC Connection

- The connected PV modules must meet following requirements
 - Same type
 - Same number
 - Identical alignment
 - Identical tilt
- The following limit values at the DC input of the inverter must not be exceeded (connecting to a higher voltage will destroy the device):

Anyhome	Maximum input voltage	Maximum input current
HNS3000TL	550V	10A+10A
HNS3600TL	550V	12A+12A
HNS4000TL	550V	13A+13A
HNS4500TL	550V	14A+14A
HNS5000TL	550V	15A+15A
HNS5500TL	550V	15.5A+15.5A
HNS6000TL	550V	16A+16A

5.3.2 Assembling the DC Plug Connector

In order to connect to the inverter, all connection cables of the PV modules must be equipped with the DC plug connectors provided. You will find the necessary DC plug connector for DC connection in the delivery.

To assemble the DC plug connectors, proceed as detailed below. Ensure the plug connectors have the correct polarity. The whole connector will include the male side and female side as showed below.




Male side connector(M)




Female side connector(F)

Assembly Instructions:

1. Adjust the stripper stopper and put the cable in corresponding notch to strip the length of 12mm. Please refer to the following figures.

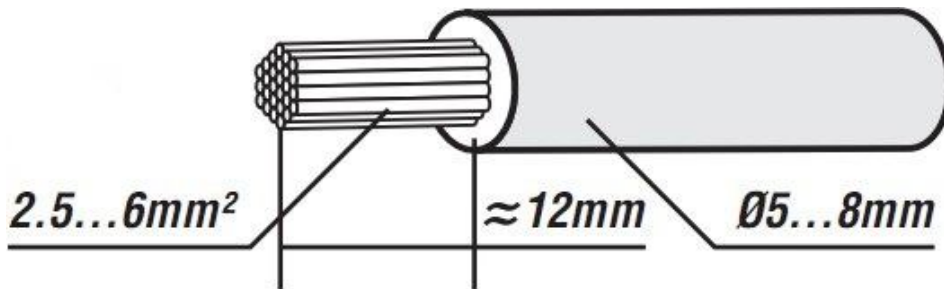

2. Insert striped cable into contact barrel and insure all conductor strands are captured in the contact barrel.
3. Compress them together with the crimping pliers.
4. Insert contact cable assembly into back of male and female connector. A “click” should be heard or felt when the contact cable assembly is seated correctly. Then turn the cap to the coupler. Please refer to the following figures.

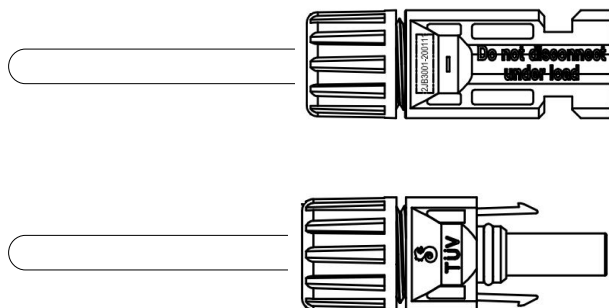

5.3.3 Connecting the PV Generator (DC)



DANGER!

Danger to life due to high voltages in the inverter.


- Before connecting the PV generator, ensure that the AC&DC circuit breaker is switched off and that it cannot be reactivated.



Notes:


1. Disconnect the circuit breaker.
2. Check the connection cables of the PV modules for correct polarity and that the maximum input voltage of the inverter is not exceeded.
3. Check the DC plug connector for correct polarity and connect it.

Plug the DC plug connectors to DC terminals on inverter.

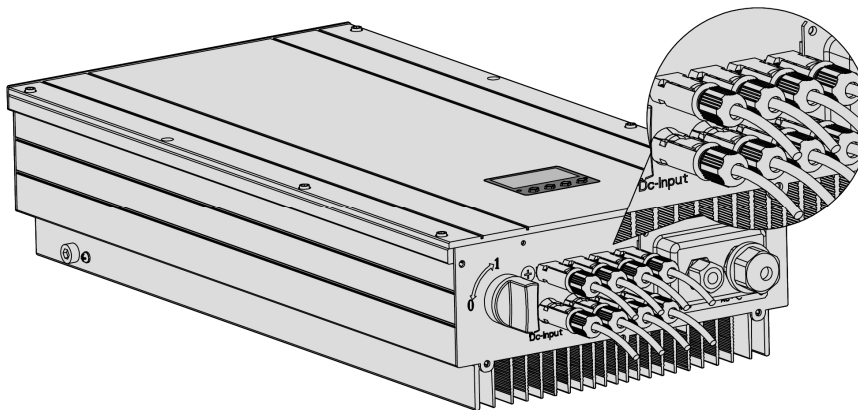

6 System Diagram

The typical connection diagram for the entire PV system is shown in the following figure.

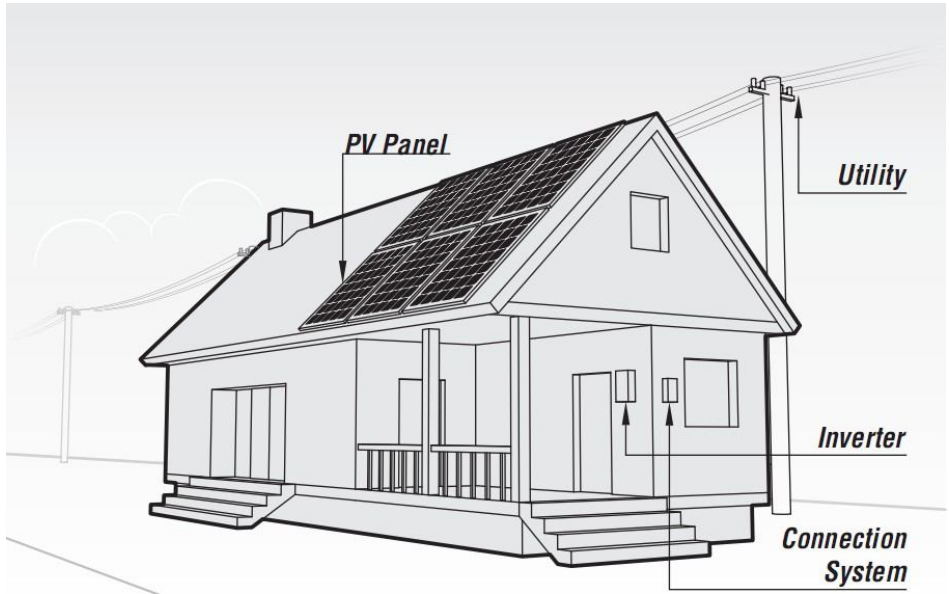

1. PV Panel: Provide DC power to inverter
2. Inverters: Converts DC (Direct Current) power from PV panel(s) to AC (Alternating Current) power. Because Inverter is grid-connected it controls the current amplitude according to the PV Panel power supply. Inverter always tries to convert the maximum power from your PV panel(s).
3. Connection system: This “interface” between Utility and PV-Inverter may consist of electrical breaker, fuse and connecting terminals. To comply with local safety standards and codes, the connection system should be designed and implemented by a qualified technician.


Refer to following the table to choose the AC breaker.

Anyhome	Nominal AC Current [A]	Rate current of AC breaker[A]
HNS3000TL	14	25
HNS3600TL	16	25
HNS4000TL	18	32
HNS4500TL	20	32
HNS5000TL	22	40
HNS5500TL	24	40
HNS6000TL	26	40


4. Utility: Referred to as “grid” in this manual, i.e. the way your electric power company provides power to your place. Please note that Inverter can only connect to low-voltage systems (namely, 220, 230VAC, 50Hz).

7 Operation

Product Overview

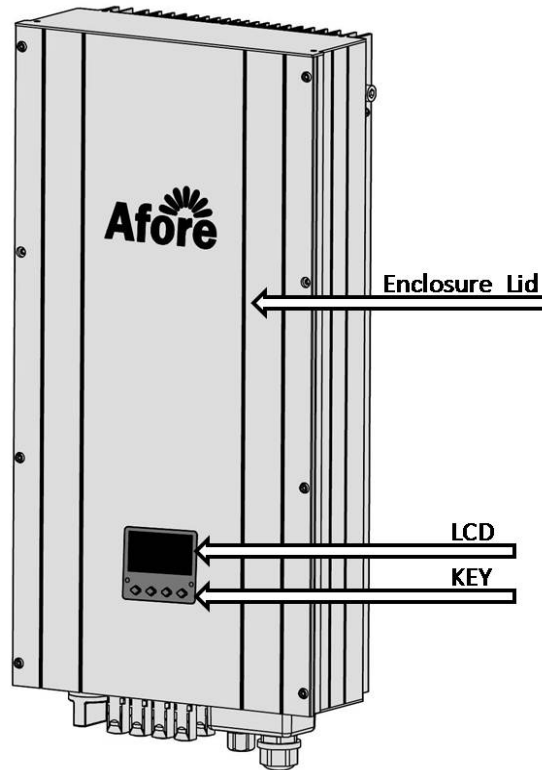

7.1 Overview of Controls and Displays

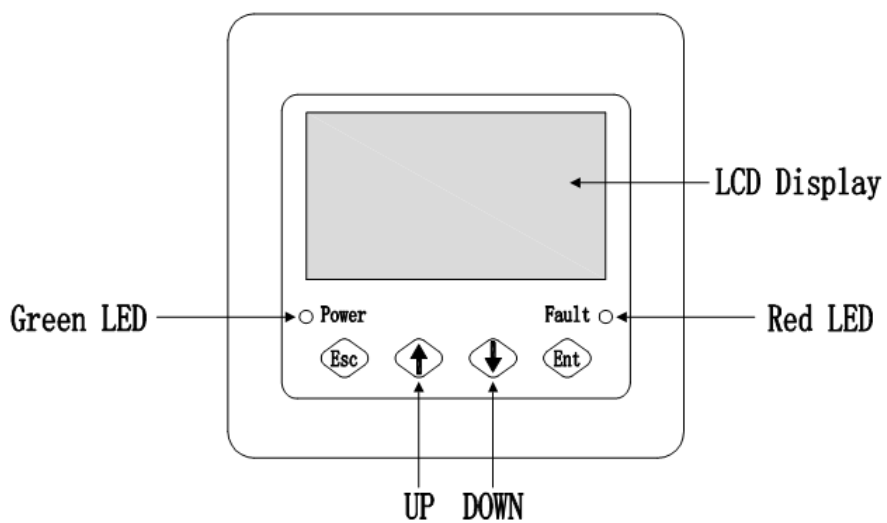

There are four function keys on the front panel (from left to right): Esc, Up, Down,

Enter.

The keypad is used for:

- Scroll the displayed parameter (Up and Down keys);
- Accessing and modifying the adjustable parameters (Esc and Enter keys).

7.2 Commissioning

After completing the mechanical and electrical installation, the inverter is put into operation.

1. Switch on the DC and breaker.

The inverter starts up automatically when the power from PV generator is sufficient.

2. Check whether the display and LEDs are indicating a normal operating state.

A	Green	Glowing, operation
B	Red & LCD backlight	Flashing, contact installer

7.3 LED Display

The inverters are equipped with two LEDs including “green” and “red” which provide information about various operating states in the following ways. They are marked with “Power” and “Fault”, respectively. When the inverter is power on from the generator and operating correctly, the green LED is on. The red light is flashing during the inverter is operating correctly indicates a fault in the system or inverter, and the LCD display provides the exact information.

LED DC Power in (green):

The green LED is illuminated from a generator voltage of approx. 120V onward and extinguishes as soon as the generator voltage falls below 100V. The DC Power in LED signals that the inverter is in its active state and the inverter controls are enabled. If this LED is not lit up which means the inverter will not be able to start grid feeding. Under normal operating conditions the LED is illuminated in the morning when there is enough daylight, and extinguishes again when it gets dark.

Under normal operating conditions the inverter starts grid feeding in the morning and terminates this process as it becomes dark. This process might be repeated several times throughout the day, especially in the morning and evening. This is not a sign of faulty operation but is normal operating behavior.

Fault LED (red):

This LED indicates that the grid-feeding process has been terminated as a result of a malfunction.

Please wait for about 10 minutes to verify if the malfunction is only temporarily. If not, please contact your authorized electrician. On elimination of the error the grid feeding process is re-started after about 5 minutes.

In the event of a fuse failure please contact your authorized electrician. In case of a general power grid failure please wait until the problem has been resolved. The inverter will restart automatically.

7.4 LCD Display


A backlight LCD display is integrated into the inverter so that it can be easily visible.

Inverter starts up automatically when DC-power from the PV panel is sufficient.

During startup (the green led is illuminated), the LCD shows logo of company and version of inverter.



The LCD will be initialized for 3 seconds. In the normal operation status, the display will show the default menu as follow:

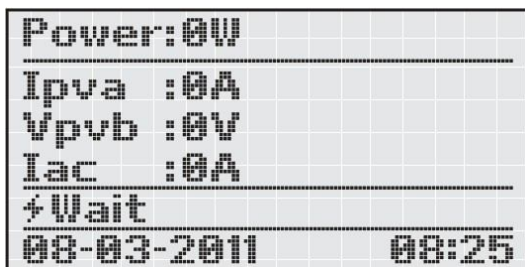

7.4.1 LCD Display

All content shows in the LCD by default:

Power	The current output power (W)
Ipv	The present current of the solar generator (A)

Vpv	The present voltage of the solar generator (V)
Iac	The present grid current (A)
Vac	The grid voltage (V)
EToday	The energy generated today in kilo watt hours (KWh)
ETotal	The energy generated since starting up the inverter (KWh)
RunTim	The time since the energy generated today (minutes)
SumTim	The total time since starting up the inverter (hours)

The current information occurring on the PV inverter

The current time & date

(Character 'a' and 'b' represent two MPPT connected with two solar panels, respectively.)

Ipv, Vpv, Iac, Vac, EToday, Etotal, RunTim, SumTim in the block diagram will be shown one by one with default 3s interval. Screens can be scrolled manually by pressing the 'Up' key.

Along with the different working states of the inverter, the line of current information will display different state information as follow:

Display	Description
Wait	Initialization & Waiting
MPPT	Max power point tracking
Power Limited Operation	The inverter only can be operated under the rated power
Hot	Limited power operation caused by over temperature
EEPROM Failure	Internal device fault
Para Over Range	Internal parameter over range
Ref Voltage Error	Reference voltage error
Vac Sensor Fail	Grid voltage sensor failure
Iac Sensor Fail	Grid current sensor failure
Ipva (Ipvb) Sensor Fail	A fault has occurred in one of a & b current sensor of the inverter.
GFCI Failure	GFCI sensor failure
AC Fuse-Check Fail	Fuse of the grid-side melted
AC Relay-Check Fail	Relay of the grid-side failure
PVA (PVB) Over Voltage	A & B represent two individual PV panels, PV voltage over 550V.
Busbar Over Voltage	The Bus voltage of PV strings exceeds permitted values.


Display	Description
Utility Loss	No utility or power off
Vac Over Voltage	Grid voltage high
Vac Under Voltage	Grid voltage low
Fac Over Range	Grid Frequency over limited
Grid Islanding	Grid voltage Islanding
Fault PDP	Internal device (PDP module) fault
GFCI Activation	The inverter has detected a ground fault in the PV generator.
DC INJ High	The alternative component of the DC current is out of the permitted range.
AC Over Current	Grid current is over range.
PVA (PVB) Over Current	A & B represent two different PV strings.
Over Temperature	The temperature of inverter is over 85°C.
RS485 Failure	RS485 represent communication module.
RTC Failure	Real time clock failure

(In the state of Fault, the red LED will flash. In most situations, the inverter requires very little service. However, if inverter is not able to work perfectly, you can check more details in the chapter ‘9 Trouble shooting’)

7.4.2 Main Menu

Press the ‘Esc’ key to enter the main menu. The main menu contains 5 submenus as follow:

Press the ‘up’ & ‘down’ keys to select the submenu. When chosen item is selected, press ‘Enter’ key to open the submenu. Pressing the ‘ESC’ key calls back the Main menu.

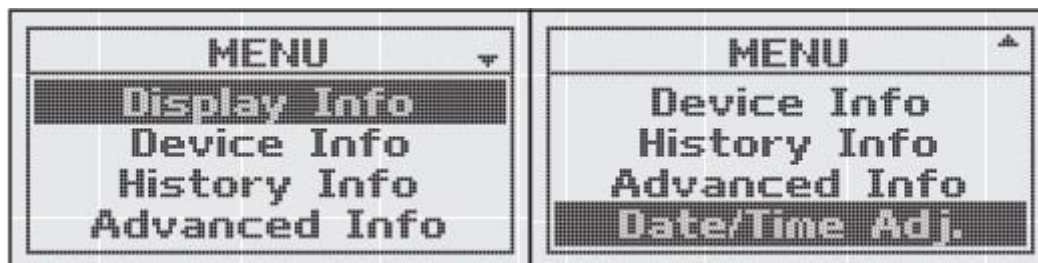

Display Info

The interface of ‘Display Info’ shows all the parameters that the inverter in the normal operation status. The pattern of the interface is as same as the default menu after the LCD is initialized. As the follow figure:

Power :0W
Iac :0A
Vac :238V
EToday:0KWH
+MPPT
08-03-2011 08:25

Device Info

Press 'Enter' to open the submenu 'Device Info'. This submenu contains these follow information: Rated power, Rated current, Rated voltage, Rated frequency, Busbar voltage, Cooler Temperature, Case temperature. Screens can be scrolled manually by pressing the 'Up' & 'Down' keys.

Device State ▾	Device State ⬆
Standard:1	Busbar V:458V
Rated P :1.5KW	Cooler T :26°C
Rated I :7A	Case T :24°C
Rated V :230V	
Rated F :50Hz	

History Info

Press 'Enter' to open the submenu 'History Info'. 'History Info' records the fault information group and it records the fault parameter in detail. Screens can be scrolled manually by pressing the 'Up' & 'Down' keys.

Advanced Info

'Advanced Info' refers to the password. Type in the correct password (The password can be altered manually by pressing the 'Up' and 'Down' keys, then press the 'Enter' key to confirm).

INPUT:
00000


For safety usage and do not affect the efficiency of the inverter, this submenu should be operated by the authorized electrician only. Pressing 'Esc' calls back the main menu.

Date/Time Adj.

To ensure the correct statistical results of 'day power', please make sure the system time is set to local time.

Press 'Enter' to get access to the 'Date/Time Adj.'. Set the time by the procedure below.

Pressing 'Down' to choose the option, and then use 'Up' key to set the number. After adjusting the time and date, pressing 'Enter' to confirm and save, the interface will show the figure as below. Press 'Enter' again the interface will return to the previous main menu. Pressing 'Esc' if cancel.

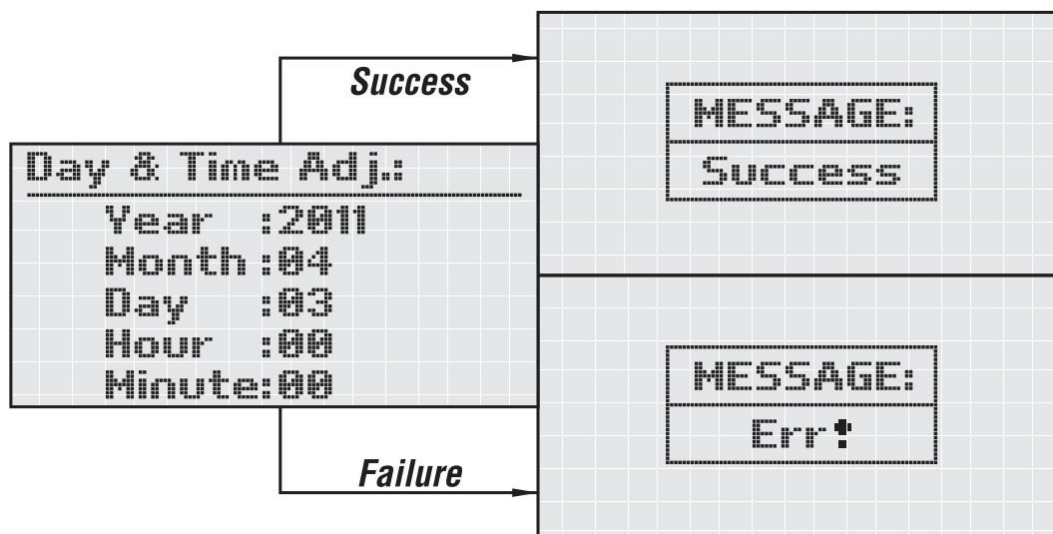


8 Auto Test

The 'Auto test' can be download from Afore company' website www.aforeenergy.com. The auto-test function is stipulated in accordance with the Italian Standard CEI 0-21. It will enable verification of the voltage and frequency monitoring function.

8.1 The auto-test can be started by any user.

8.2 The auto-test software shall be installed in a PC that will communicate to the PV grid-connected inverter through the "485 port". For the overall duration of the auto-test, the grid-connected inverter doesn't export power to the AC grid. And meanwhile make sure the inverter was connected to the PV arrays, and the inverter was generating.


8.3 After clicking the icon  , the interface will be displayed on the PC screen.

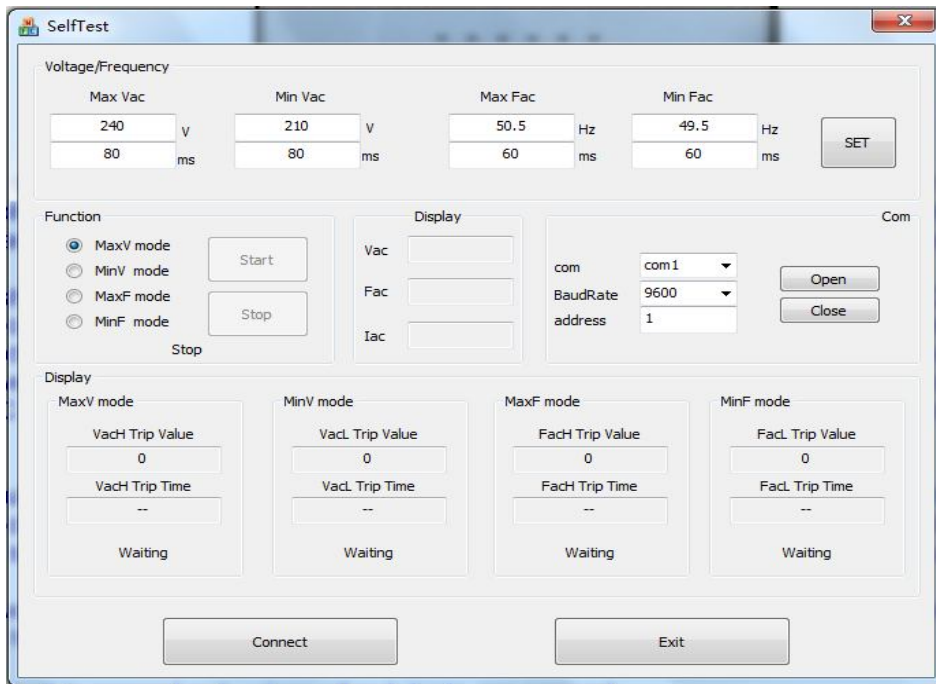

8.4 Clicking the “Open” button, it will communicate to the PV grid-connected inverter through the “485 port”.

8.5 Then clicking the “Connect” button, the interface will be displayed as followings if successfully connecting. And meanwhile you should ensure the inverter is safely connected to the utility.

8.6 And the AC grid voltage, the AC grid frequency and the AC current of the grid-connected inverter will be shown in the PC screen.

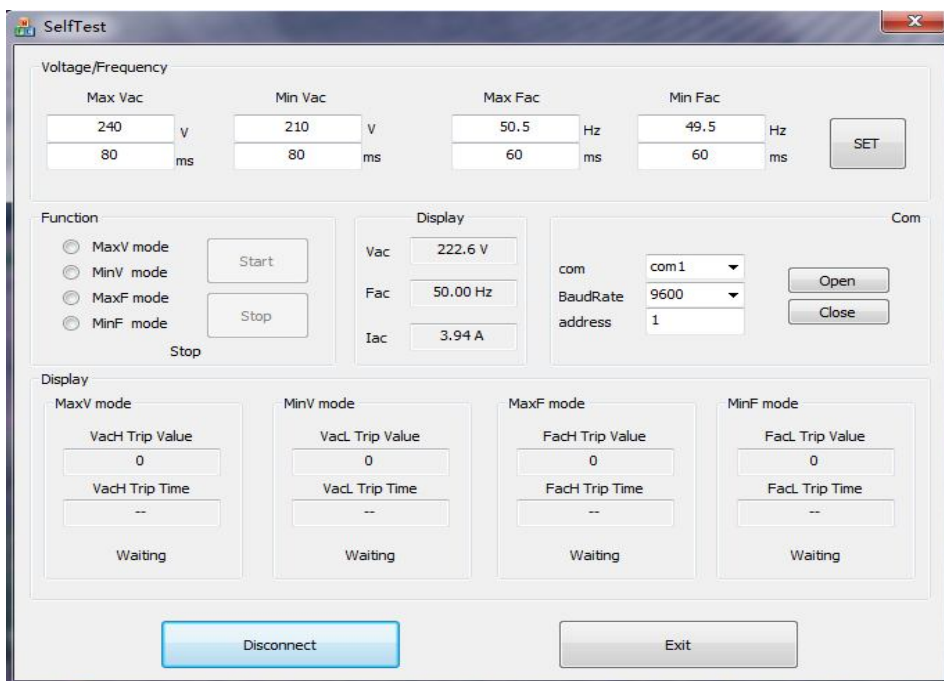

8.7 If the connecting is failed, repeat the step 4 to the step 5 until successfully

connecting.

8.8 The values of the thresholds and software trip time for the grid voltage and the grid frequency related to the auto test can be set. The default parameters are as follows:


Max Vac (Maximum AC voltage threshold): 264.5V; $\leq 0.2s$

Min Vac (Minimum AC voltage threshold): 92V; $\leq 0.2s$


Max Fac (Maximum AC frequency threshold): 51.5Hz; $< 0.1s$

Min Fac (Minimum AC frequency threshold): 47.5Hz; $< 0.1s$

8.9 If all values are correct then the user can be able to click the “SET” button on the PC screen to set the auto-test parameters. The interface will be displayed on the PC screen as followings if successfully set.

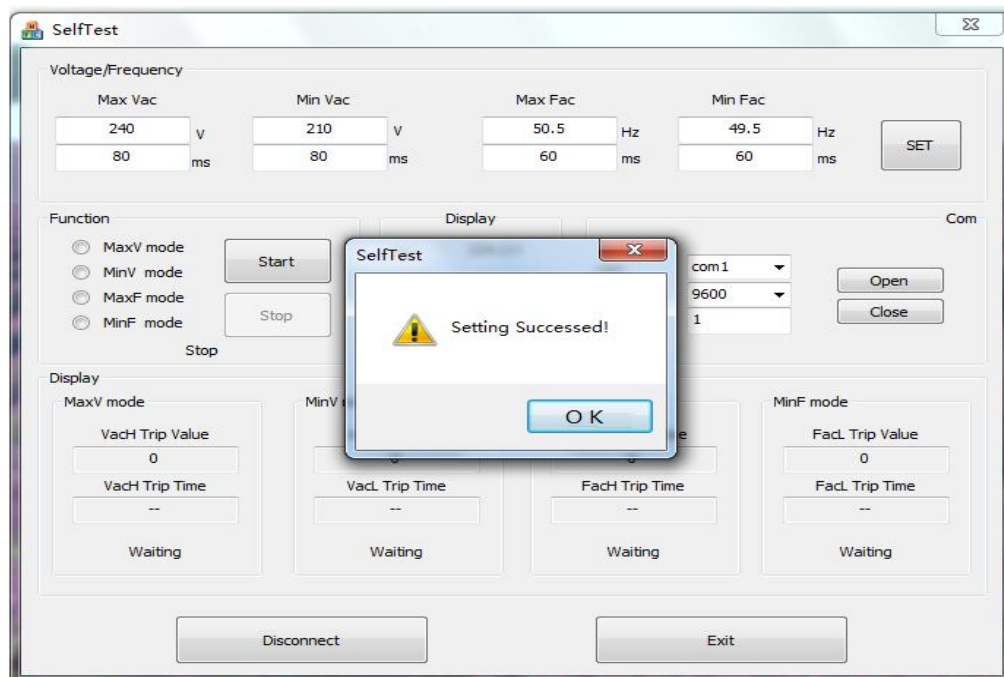


8.10 After setting the values of the auto-test, there are four mode selections to test the auto-test and the user can only select one mode for every time. After selecting the mode, the user can click the button “Start” to start the auto-test. And if clicking the “stop” button, the auto-test will stop. For example, if the user selects the MaxV mode and clicks the button “Start”, the following will be shown on the PC screen.

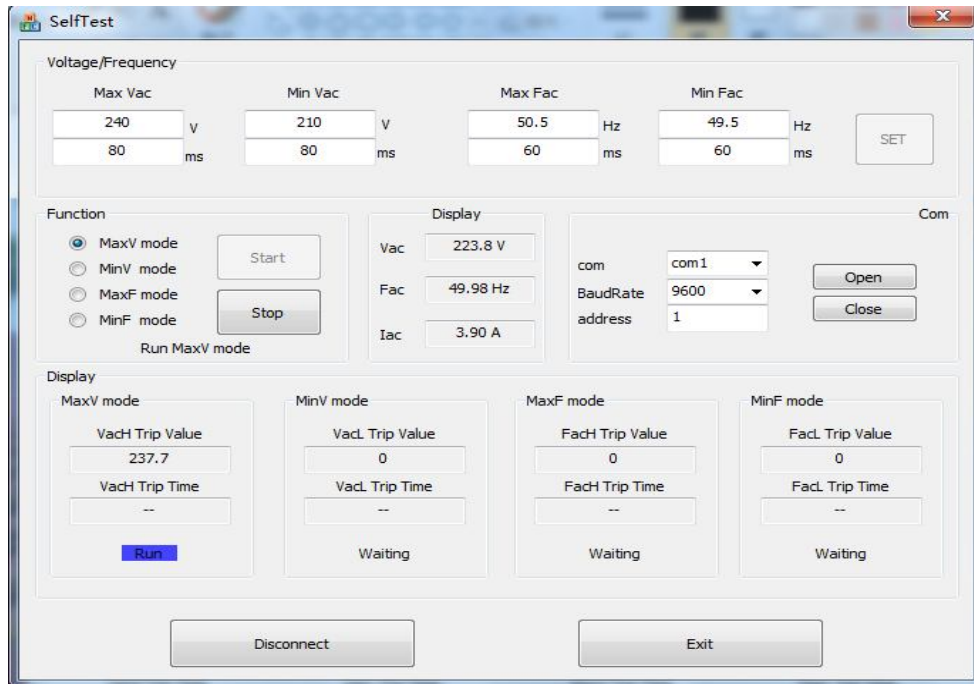

8.11 The slew rate of the threshold values , either increase or decrease, are equal or less than 0.05Hz/s for AC grid frequency and equal or less than 1V/s for AC grid voltage starting from the maximum (or minimum) threshold value. During the auto-test, the threshold value changes linearly and the measured values of the grid will be displayed on the PC screen in real time. The threshold will move from the maximum (or minimum) threshold value toward the measured value of the AC grid. While the two value matching occurs, the PV grid-connected inverter will disconnect the AC grid through the AC relays.

8.12 The matched value between the threshold and the AC grid and the software trip time between the matching is recognized and the AC relays is open will be displayed on the PC screen. The status of the each auto-test, Pass or Fail, will also be displayed on the PC screen as well. The following will be shown on the PC screen if selecting the MaxV mode.

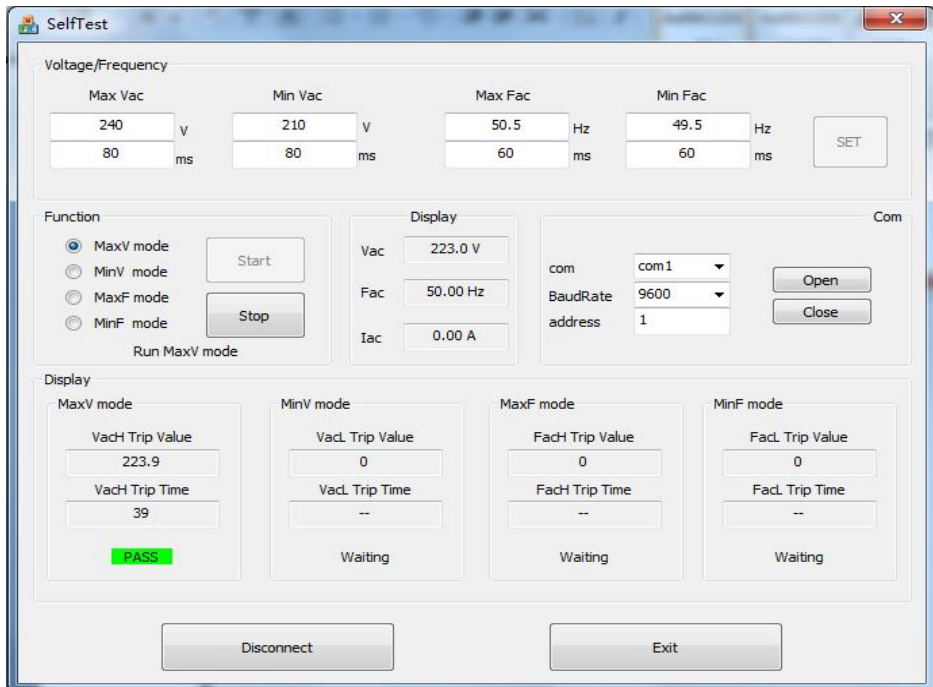

8.13 If firstly click the “Disconnect” button and then click the “Exit” button, the auto-test will stop and the interface on the PC screen will exit.

Note: The results will be saved as an Access file after the auto-test process is completed.

9 Trouble Shooting

In most situations, the inverter requires very little service. However, if inverter is not able to work perfectly, we recommend the following solutions for quick troubleshooting.

- If there is a fault, the red LED will flash. Please refer to the following table for a list of potential problems and their solutions.

No.	Definition	Error Message	Possible Causes	Corrective Measure
1	PVA over voltage	PVa Over Voltage	1. The open-circuit voltage of PV panels exceeds permitted values.	Adjust the PV panel configuration
			2. Inverter fault	Restart the inverter; if the error still remains after repeated restarting, please contact our after-sales.
2	PVB over voltage	PVb Over Voltage	1. The open-circuit voltage of PV panels exceeds permitted values.	Adjust the PV panel configuration
			2. Inverter fault.	Restart the inverter; if the error still remains after repeated restarting, please contact our after-sales.
3	PN over voltage	Busbar Over Voltage	Inverter fault	Restart the inverter; if the error still remains after repeated restarting, please contact our after-sales.
4	Ground-fault current protection	Active GFCI	1. The connection of grounding wires of PV panels is incorrect.	Check the wire connection
			2. The connection of AC grounding wires of PV panels is incorrect.	Check the wire connection
			3. Inverter fault	Restart the inverter; if the error still remains after repeated restarting, please contact our after-sales.
5	EEPROM error	EEPROM Failure	Inverter fault	Restart the inverter; if the error still remains after repeated restarting, please contact our after-sales.

No.	Definition	Error Message	Possible Causes	Corrective Measure
6	Parameter error	Para Over Range	Inverter fault	Restart the inverter; if the error still remains after repeated restarting, please contact our after-sales.
7	Reference voltage error	Ref Voltage Error	Inverter fault	Restart the inverter; if the error still remains after repeated restarting, please contact our after-sales.
8	AC voltage sensor failure	Vac Sensor Fail	Inverter fault	Restart the inverter; if the error still remains after repeated restarting, please contact our after-sales.
9	AC current sensor failure	Iac Sensor Fail	Inverter fault	Restart the inverter; if the error still remains after repeated restarting, please contact our after-sales.
10	PVA current sensor failure	Ipva Sensor Fail	Inverter fault	Restart the inverter; if the error still remains after repeated restarting, please contact our after-sales.
11	PVB current sensor failure	Ipvb Sensor Fail	Inverter fault	Restart the inverter; if the error still remains after repeated restarting, please contact our after-sales.
12	Ground-fault current interrupter failure	GFCI Failure	Inverter fault	Restart the inverter; if the error still remains after repeated restarting, please contact our after-sales.
13	AC fuse blew out	AC Fuse-Check Fail	Inverter fault	Restart the inverter; if the error still remains after repeated restarting, please contact our after-sales.
14	AC relay failure	AC Relay-Check Fail	Inverter fault	Restart the inverter; if the error still remains after repeated restarting, please contact our after-sales.
15	Fan failure	Fan Check-Failure	Inverter fault	Restart the inverter; if the error still remains after repeated restarting, please contact our after-sales.
16	PDP protection	Fault PDP	Inverter fault	Restart the inverter; if the error still remains after repeated restarting, please contact our after-sales.
17	DC current protection	DC INJ High	1. The grid fluctuates too sharply.	When the grid returns to normal, the inverter restores automatically.
			2. Inverter fault	Restart the inverter; if the error still remains after repeated restarting, please contact our after-sales.

No.	Definition	Error Message	Possible Causes	Corrective Measure
18	AC over current	AC Over Current	1. The grid fluctuates too sharply.	The inverter restores automatically.
			2. Inverter fault	Restart the inverter; if the error still remains after repeated restarting, please contact our after-sales.
19	PVA over current	PVa Over Current	1. The external conditions, such as the PV voltage and the sunlight, change too sharply.	The inverter restores automatically.
			2. Inverter fault	Restart the inverter; if the error still remains after repeated restarting, please contact our after-sales.
20	PVB over current	PVb Over Current	1. The external conditions, such as PV voltage and sunlight, change too sharply.	The inverter restores automatically.
			2. Inverter fault	Restart the inverter; if the error still remains after repeated restarting, please contact our after-sales.
21	Over temperature protection	Over Temperature	1. The external conditions, such as the PV voltage and the sunlight, change too sharply.	The inverter restores automatically.
			2. Inverter fault	Restart the inverter; if the error still remains after repeated restarting, please contact our after-sales.
22	Islanding protection	Grid Islanding	1. The grid is abnormal.	When the grid returns to normal, the inverter restores automatically.
			2. Ratings of the grid-side switch do not meet the grid requirements so that the switch has tripped.	Replace the switch.
			3. AC connectors are in poor connect.	Reconnect the connectors again.
			4. Inverter fault	Restart the inverter; if the error still remains after repeated restarting, please contact our after-sales.

No.	Definition	Error Message	Possible Causes	Corrective Measure
23	Grid loss	Utility Loss	1. The grid is abnormal.	When the grid returns to normal, the inverter restores automatically.
			2. Ratings of the grid-side switch do not meet grid requirements so that the switch has tripped.	Replace the switch.
			3. AC connectors are in poor connect.	Reconnect the connectors again.
			4. Inverter fault	Restart the inverter; if the error still remains after repeated restarting, please contact our after-sales.
24	Grid over voltage	Vac Over Voltage	1. The grid is abnormal.	When the grid returns to normal, the inverter restores automatically.
			2. Inverter fault	When the grid returns to normal, restart the inverter; if the error still remains after repeated restarting, please contact our after-sales.
25	Grid under voltage	Vac Under Voltage	1. The grid is abnormal.	When the grid returns to normal, the inverter restores automatically.
			2. Inverter fault	When the grid returns to normal, restart the inverter; if the error still remains after repeated restarting, please contact our after-sales.
26	Grid frequency error	Fac Over Range	1. The grid is abnormal.	When the grid returns to normal, the inverter restores automatically.
			2. Inverter fault	When the grid returns to normal, restart the inverter; if the error still remains after repeated restarting, please contact our after-sales.
27	LCD screen do not light up/ Green LED glows.	NC	Inverter fault	When the grid returns to normal, restart the inverter; if the error still remains after repeated restarting, please contact our after-sales.

No.	Definition	Error Message	Possible Causes	Corrective Measure
28	Output power is half of the Max. Power.	NC	1. All the PV panels are connected to the inverter as one input string.	Change the installation.
			2. Inverter fault	When the grid returns to normal, restart the inverter; if the error still remains after repeated restarting, please contact our after-sales.
29	GFCI tripped	NC	1. The connection of grounding wires of PV panels is incorrect.	Check the installation
			2. The connection of AC grounding wires of the inverter is incorrect.	Check the installation
			3. GFCI is shared by both the inverter and other equipments.	Check the installation
			4. GFCI failure	Replace the switch
			5. Inverter fault	Restart the inverter; if the error still remains after repeated restarting, please contact our after-sales.
30	Isolation failure	Isolation failure	1.PV(+) or PV(-) is earthed	Check the impedance between PV(+)& PV(-)
			2.PV-inverter isn't earthed	Make sure the PV-Inverter is earthed
			3. Inverter fault	Restart the inverter; if the error still remains after repeated restarting, please contact our after-sales.
Restart: Disconnect all the input and output switches, wait until the LCD screen and all the indicating lights go off, and then reconnect all the switches again.				

- If there is no display on the panel, please check PV-input connections.
- If the voltage is higher than 120 V, and the inverter doesn't work, please call local service.
- If it is intended to replace the cable or open the enclosure lid, please call our service.
- During periods of little or no sunlight, the inverter may continuously start up and shut down. It is due to insufficient power generated to operate the control circuits.

10 Technical Data

Electrical Specifications	HNS3000TL	HNS3600TL	HNS4000TL	HNS4500TL	HNS5000TL	HNS5500TL	HNS6000TL
Input							
Max. DC Power [W]	3200	3800	4200	4700	5200	5800	6200
Max. DC Voltage [V]	550	550	550	550	550	550	550
MPPT Voltage Range [V]	120-450	120-450	120-450	120-450	120-450	120-450	120-450
Max. DC Current [A]	10+10	12+12	13+13	14+14	15+15	15.5+15.5	16+16
Isc PV [A]	12	15	16	17	18	19	20
Max backfeed current	<0.1mA	<0.1mA	<0.1mA	<0.1mA	<0.1mA	<0.1mA	<0.1mA
Number of MPPT Trackers/ Strings Per MPPT Tracker	2/2	2/2	2/2	2/2	2/2	2/2	2/2
Output							
Power Connector	Single Phase	Single Phase	Single Phase	Single Phase	Single Phase	Single Phase	Single Phase
Nominal AC Power [W]	3000	3600	4000	4500	5000	5500	6000
Nominal AC Phase Voltage [V]	230	230	230	230	230	230	230
Nominal AC Frequency [Hz]	50	50	50	50	50	50	50
Nominal AC Current [A]	14	16	18	20	22	24	26
Max AC inrush current [A]	14	16	18	20	22	24	26
Max AC fault current [A]	21	24	27	30	33	36	39
Max AC protect current [A]	21	24	27	30	33	36	39
Power Factor range	-0.9 ~ +0.9						
Output Current THD	<3%						
Power efficiency							
Max. Efficiency/400Vdc	96.90%	96.96%	97.00%	96.90%	97.11%	97.31%	97.47%
Euro Efficiency/400Vdc	96.18%	96.33%	96.43%	95.96%	96.24%	96.42%	96.53%
MPPT Efficiency	>99%	>99%	>99%	>99%	>99%	>99%	>99%

Electrical Specifications	HNS3000TL	HNS3600TL	HNS4000TL	HNS4500TL	HNS5000TL	HNS5500TL	HNS6000TL
Compliance							
Electromagnetic Compatibility	EN61000-6-1/6-3						
Anti-Islanding Protection	Internal	Internal	Internal	Internal	Internal	Internal	Internal
General information							
Dimensions (H×W×D) [mm]	584x300x130	584x300x130	584x300x130	634x300x130	634x300x130	634x300x130	634x300x130
Enclosure	IP65	IP65	IP65	IP65	IP65	IP65	IP65
Pollution degree	3						
UV protection	Metal enclosure						
RCD	Internal						
Weight [kg]	18.5	18.5	18.5	18.5	19.5	19.5	19.5
Ambient Temperature Range	-20 °C ~ +55 °C	-20 °C ~ +55 °C	-20 °C ~ +55 °C	-20 °C ~ +55 °C	-20 °C ~ +55 °C	-20 °C ~ +55 °C	-20 °C ~ +55 °C
Humidity range	4% ~ 100%						
Topology	Transformerless						
Communication Interface	RS485	RS485	RS485	RS485	RS485	RS485	RS485
Night Consumption [W]	<1	<1	<1	<1	<1	<1	<1
Cooling Concept	Convection	Convection	Convection	Convection	Convection	Convection	Convection
Noise Emission [dB]	<28	<28	<28	<30	<30	<30	<30
Elevation	Up to 1000m without derating above sea level.						

The Afore inverters are available for outdoor using and wet location. PV modules connecting to inverter should comply with the requirement of IEC61730 class A, and PV arrays are not earthed.

11 Contact

If you have any technical problems concerning our products, you can contact us. We require the following information in order to provide you with the necessary assistance:

- Inverter type
- Inverter serial number

Afore New Energy Technology Co., Ltd.

www.aforeenergy.com

ADD: BLD 2B, No 1588, Lianhang Rd. Minhang District, Shanghai, China. 201112

TEL: +86-21-54326230


FAX: +86-21-54326136

E-MAIL: Service@aforeenergy.com


Annex

NOTICE FOR INSTALLATION

HNSxxxxTL(xxxx=3000,3600,4000,4500,5000,5500,6000)

 **Notice!**

Group B **Group A**

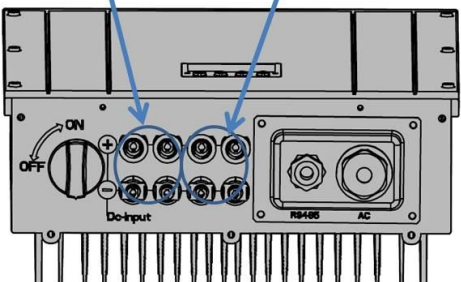


This device is equipped with 2 groups of connecting sockets for PV input (Group A and Group B), and each group contains two pairs of connecting sockets (2 PV+ and 2 PV-). In order to realize the optimal operation, at least one pair of the connecting sockets in each group must be connected to PV arrays. Please ensure that the PV input power be equally divided between the two groups, no matter how the connecting sockets are connected. Non-adherence to this instruction may adversely affect the operating convenience or functionality of the device.

Please refer to the following figures for correct installation.


Correct Installation

HNSxxxxTL(xxxx=3000,3600,4000,4500,5000,5500,6000)

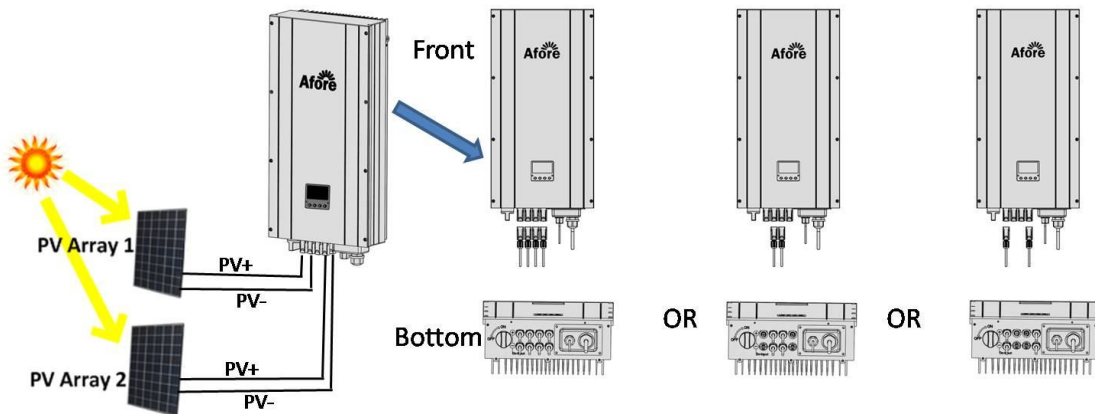

Wrong Installation

HNSxxxxTL(xxxx=3000,3600,4000,4500,5000,5500,6000)

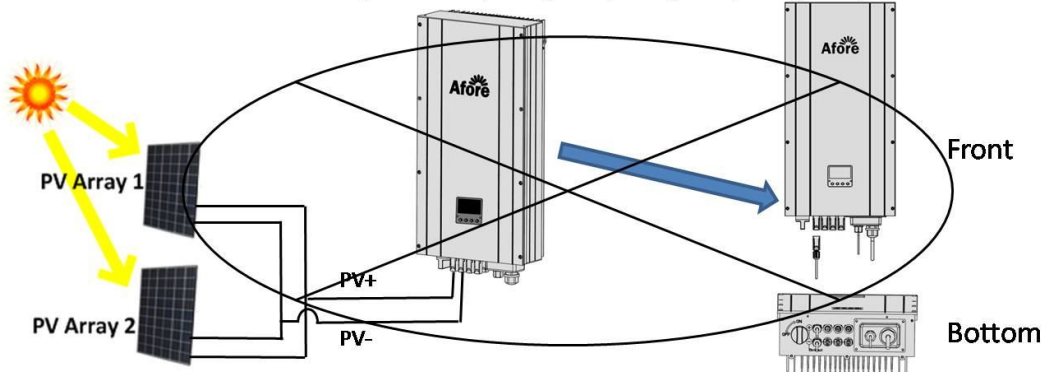

Warranty card

No.:

This warranty card should be retained by the user.

Product information

Inverter model:

Serial number of inverter:

Invoice number:

Purchase date:

Date of commissioning:

Warranty period: 60 months from the date of the inverter installed or the purchase invoice date marked.

Terms and conditions

- During the warranty period, if the product breaks down which is recognized in accordance with the instructions and other cautions by the authorized service personnel, our company will be responsible for free maintenance.
- If can't repair, replacement of the same product for free.
- Please provide proof of purchase invoice and warranty card to our authorized service personnel for a free repair.

Exclusion of liability

The following factors lead to the failure or damage is out of warranty for free.

- Transport damage.
- Incorrect installation that does not comply with standards, improper operation and unauthorized modifications to the units or repair attempts, in particular, by non-approved electrical engineers.
- Operated using defective equipment.
- Operation in the terrible condition beyond the instruction stated, such as inadequate ventilation.
- The breakdown and the damage by foreign objects and force majeure.
- The warranty expired when warranty card and purchase invoice is altered. Product malfunction caused by the above, if you require maintenance service, we can provide paid service.

Product information

Inverter model:

Serial number of inverter:

Invoice number:

Purchase date:

Date of commissioning:

Customer information

Name:

Tel. No.:

E-mail:

Address:

Zip code:

Signature:

Customer information

Name:

Tel. No.:

E-mail:

Address:

Zip code:

Dealer's information

Installer name:

Company name:

Address:

Tel. No.:

AFORE NEW ENERGY TECHNOLOGY (SHANGHAI) CO.,LTD

www.aforeenergy.com

ADD: BLD 2B, No 1588, Lianhang Rd.

Minhang District, Shanghai, China. 201112

TEL: +86-21-54326230

FAX: +86-21-54326136

E-MAIL: Service@aforeenergy.com



To register your inverter, please mail this warranty registration card to the dealer.

Dealer's address:

stamp:



AFORE NEW ENERGY TECHNOLOGY (SHANGHAI) CO.,LTD



Afore New Energy Technology Co., Ltd.

www.aforeenergy.com

ADD: BLD 2B, No 1588, Lianhang Rd. Minhang District, Shanghai, China. 201112

TEL: +86-21-54326230

FAX: +86-21-54326136

E-MAIL: Service@aforeenergy.com